

Installation Instruction

(Benz Vito 2016+)

Precautions

- All pictures in this manual are for reference only. Pictures and objects may differ, but the installation method is the same.
- In order to facilitate your installation, please carefully read the product manual before installation; When installing, protect your car's surface and avoid scratching.
- Please check regularly if all accessories connected with the car are loose to ensure safety.

Installation Steps

Refer to the parts list and accessory drawings to check if the accessories are complete. After the product is installed, press the tailgate button for 3-5 seconds. You will hear a sound "DI——" and then loose your hand. Press the tailgate button again and close it. You will hear two sounds. Tail gate learning is finished.




1. Remove the original car trim panel.




2. Remove the original right lower bracket and the brace rod. Install our lower right bracket (**The ball head position is facing inward**). The top of the bracket is fixed with our screws, and the bottom is fixed with the original car screws.



3. Remove the original right upper bracket and the brace rod. Install our upper right bracket (**The ball head position is facing outward**). and fix it with our screws.

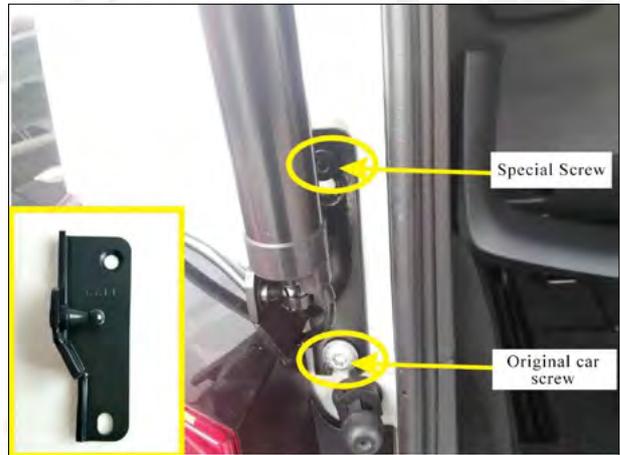

4. Remove the original left lower bracket and the brace rod. Install our lower left bracket (**The ball head position is facing inward**). The top of the bracket is fixed with our screws, and the bottom is fixed with the original car screws.

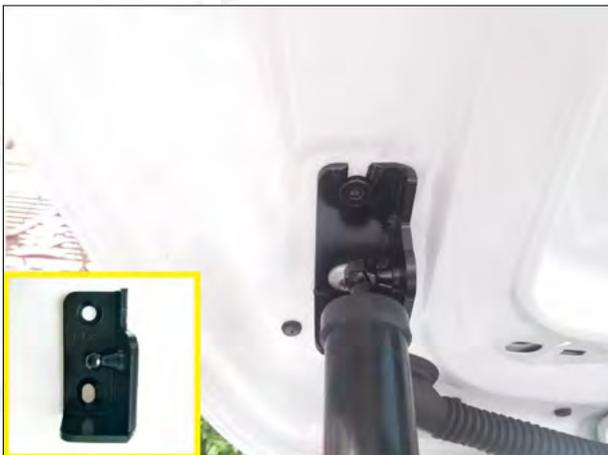

5. Remove the original left upper bracket and the brace rod. Install our upper left bracket (**The ball head position is facing outward**). and fix it with our screws.




6. Remove the two screws in the yellow circle and remove the car lights (The left and right steps are the same).



7. The brace rod cable is routed from the headlights to restore the lights (The same steps are left and right).




8. Remove the trim panel from the main driving, punch holes and install our front switch button.

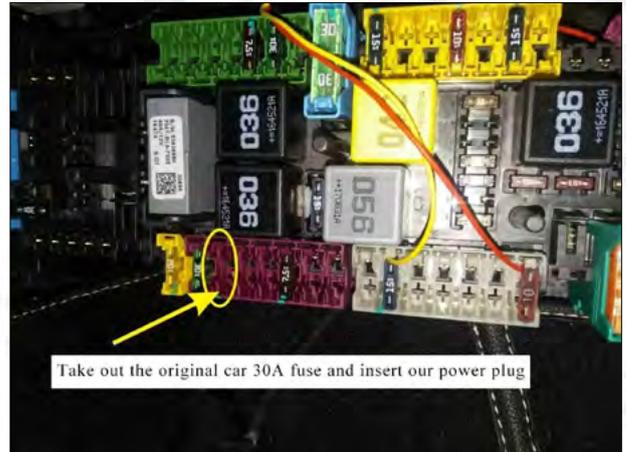

9. Remove the trim panel under the copilot to find the power supply, unplug the original car 30A fuse. Plug in our power plug.




10. Find the ground wire on the right side of the copilot and connect the ground wire.

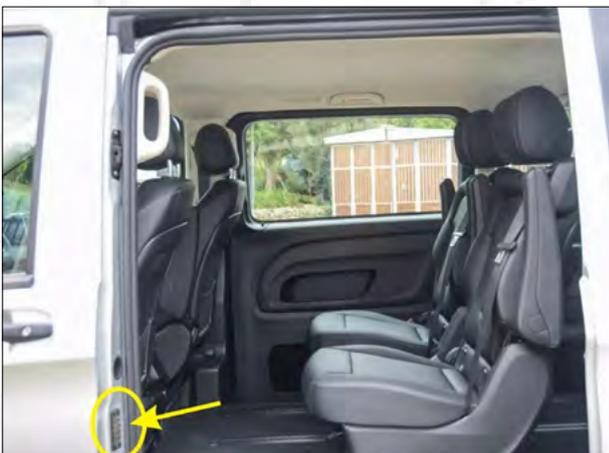



11. Remove the trim panel from the main driving belt B column and find this socket. Then remove the screw and this socket.



12. Our central control cable is connected to the reddish yellow cable of this seat (The third hole in the first row from left to right)

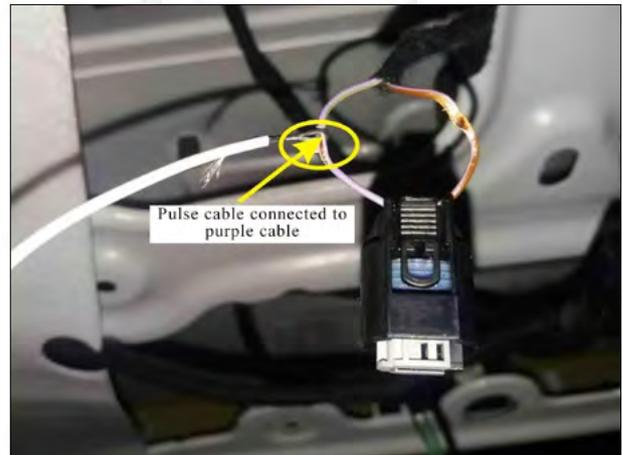

13. Unplug the tailgate pulse cable socket (The button of the original car open trunk). Our pulse cable connects to this purple cable).

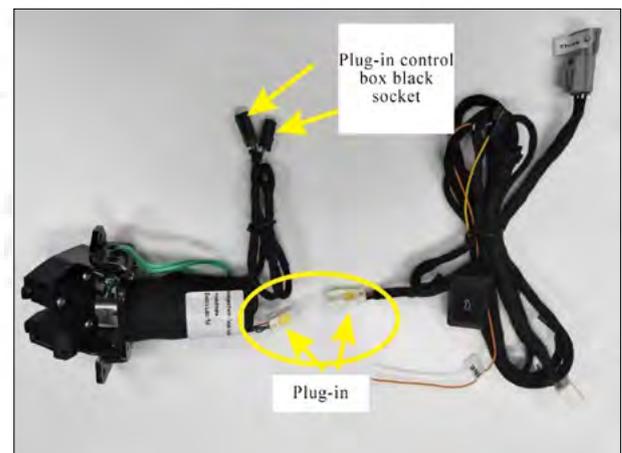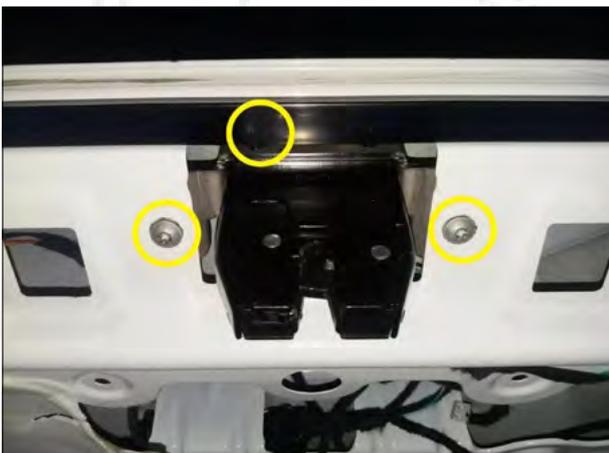

14. Remove screws in the yellow circle and the original door lock, install our top suction lock and fix it with the original car screw.



15. Insert our electric top suction lock socket as shown in the figure.



16. Remove the trim panel and find the original car lock.



17. Remove the original car lock and add a gasket under the original car lock.



18. Insert the brace rod socket, electric suction lock socket and power cord socket into the control box. Central control box installation position. Fixed the central control box with the original car screws, meson and gasket.

19. Cut a small square with the blade at the original tailgate trim panel and install our tailgate switch button.

After the installation is complete, you must set the tailgate learning. Make sure that the door can be opened and closed in place. (Raise the tailgate to ideal height. Then press the tailgate button for 3-5 seconds. You will hear a sound "DI——" and then loose your hand. Press the tailgate button again and close it. You will hear two sounds "DI DI". Tail gate learing is finished.) If you do not hear two sounds, learning is unsuccessful and you need to re-learn. If you can not close the door, use your hand to push the door to close when you are learning.

Disclaimer

Due to improper installation and improper use, caused the relevant issues and losses, these not include within our company 's warranty. Thanks for your purchasing our products. Please read the manual carefully before use and collect it for later reference.

Key Control Method

1. Press the original Key fobs three times to open and close the door.
2. Press the front switch button to open and close the door.

Setting Height

- 1.Raise the tailgate to the ideal height;
- 2.Press the tailgate switch for 3-5s;
- 3.When you hear a long sound "Di——", loose your hand and press the tailgate switch again to close the door.
- 4.When you hear two sounds "Di Di", Setting height is finished.

Note: Do not close the door with your hands after setting the ideal height.

Be sure to use our own tailgate switch.

Fault Solution

The original key fob does not work	Check if the yellowe central control line is connected.
Not working after installation	1.Check if the positive power supply is connected with 12V-16V. 2.Check if the power fuse is inserted. 3.Check if the ground wire is connected.
Closing the tailgate not in place The tailgate can only open to half	1.Check if the left and right bracket are installed reversed. 2.Check if the control box wire is inserted. 3.Check if the brackets are fixed with our screws. 4.There are two rubbers on the left and right sides of the original tailgate cover. Check if they are loose and need to be tightened.



All rights reserved.